


Servizio Parental Control per modem Zyxel DX3301

Per **attivare/disattivare il “Controllo Parentale”** basta accedere con un browser (Crome, Edge, Firefox...) all’interfaccia grafica del modem fornito da Enel inserendo nella barra degli indirizzi quello di seguito riportato: **192.168.1.1**

Si dovrà inserire nei relativi campi:

Nome Utente: “admin”;

Password: che si trova **stampata sull’etichetta posta sul retro del modem: “Login Password”.**

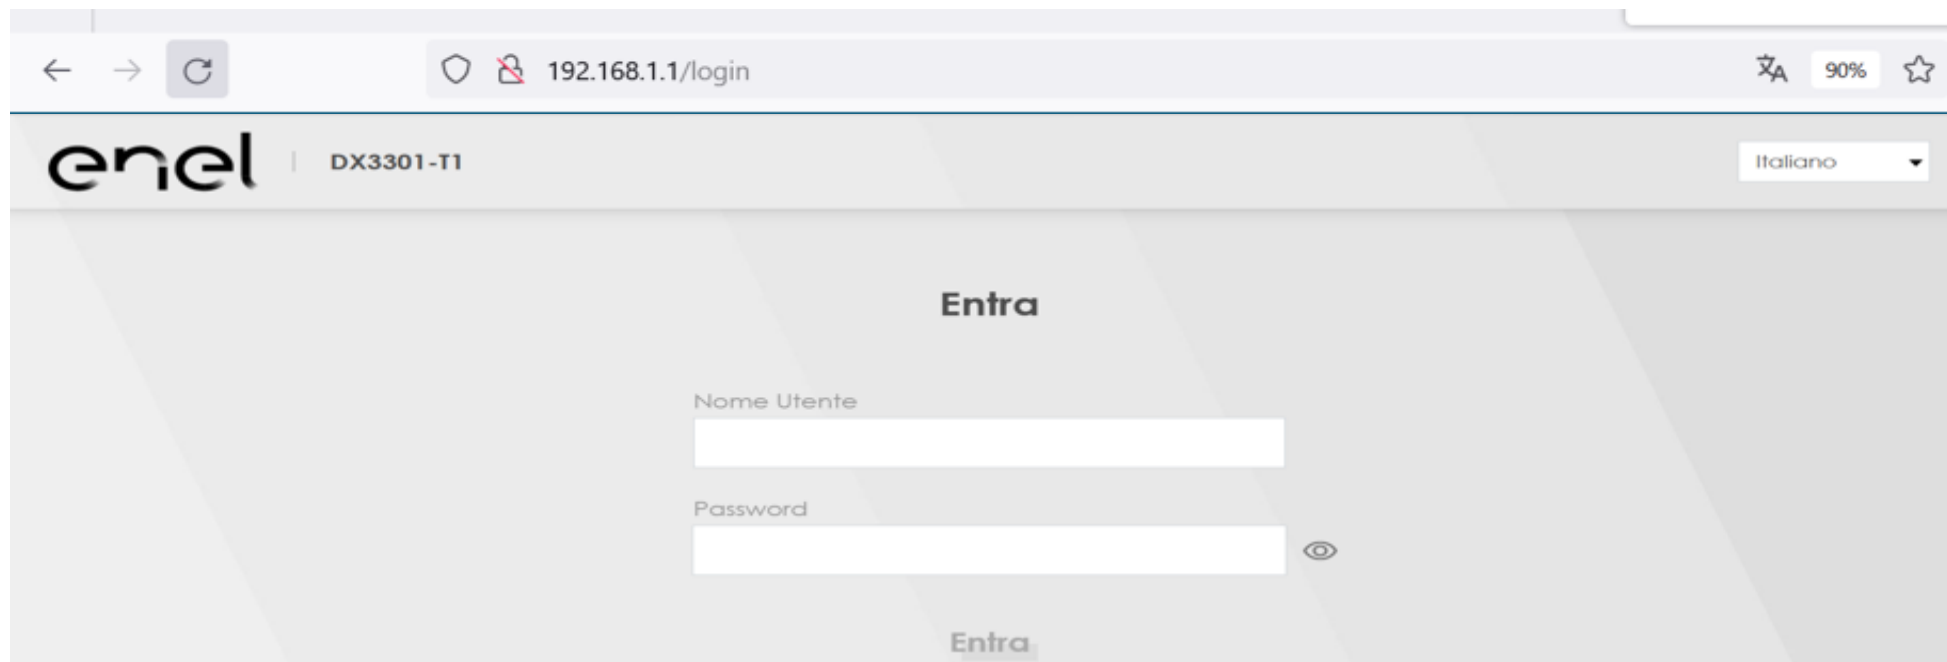

The screenshot shows a web browser window with the address bar displaying "192.168.1.1/login". The page content includes the Enel logo and "DX3301-T1" on the left, and a language dropdown menu set to "Italiano" on the right. The main heading is "Entra". Below the heading are two input fields: "Nome Utente" and "Password". A "login" button is located at the bottom of the form area.

Una volta effettuato l'accesso, bisogna cliccare sull'icona menù (**3 barrette in alto a destra**):



The screenshot displays the Enel DX3301-T1 web interface. At the top left, the Enel logo is followed by the model name "DX3301-T1". In the top right corner, there is a blue arrow pointing to a menu icon consisting of three horizontal bars. Below the header, the interface is divided into two main sections: "Connettività" (Connectivity) and "Informazioni di Sistema" (System Information).

Connettività

The connectivity section shows a status diagram with three nodes: a globe, a server rack, and a laptop. Each node is enclosed in a red circle, and they are connected by lines with green checkmarks, indicating that all connections are active.

Informazioni di Sistema

Nome Modello	DX3301-T1
Versione Firmware	V5.50(ACDU.1)b11_E0
Tempo di attività del Sistema	28 giorni 3 ore 49 minuti 4 secondi
Indirizzo MAC LAN	FC:22:F4:87:30:80
VDSL WAN	Rx:70190 Tx:21599 (Kbps)


Scegliere il menù “**Sicurezza**”:



Scegliere la scheda **“Controllo Genitori”**:

The image shows a screenshot of the Enel DX3301-T1 web interface. The main content area is dimmed, showing sections for 'Connettività' (Connectivity) and 'Informazioni di' (Information). A sidebar menu is open on the right, listing various settings categories: Home, Network, Sicurezza (Security), Telefonia (Telephony), System Monitor, and Manutenzione (Maintenance). The 'Sicurezza' section is expanded, showing sub-options: Firewall, Filtro MAC, Sicurezza Domestica, Controllo Genitori (highlighted with a blue arrow), and Regole di pianificazione (Scheduling Rules). On the far right, there are icons for 'Tema' (Theme), 'Riavvia' (Restart), 'Lingua' (Language), and 'Esci' (Logout).

Abilitare il Controllo Genitori spostando il cursore da “OFF” (grigio) ad “**ON**” (azzurro)

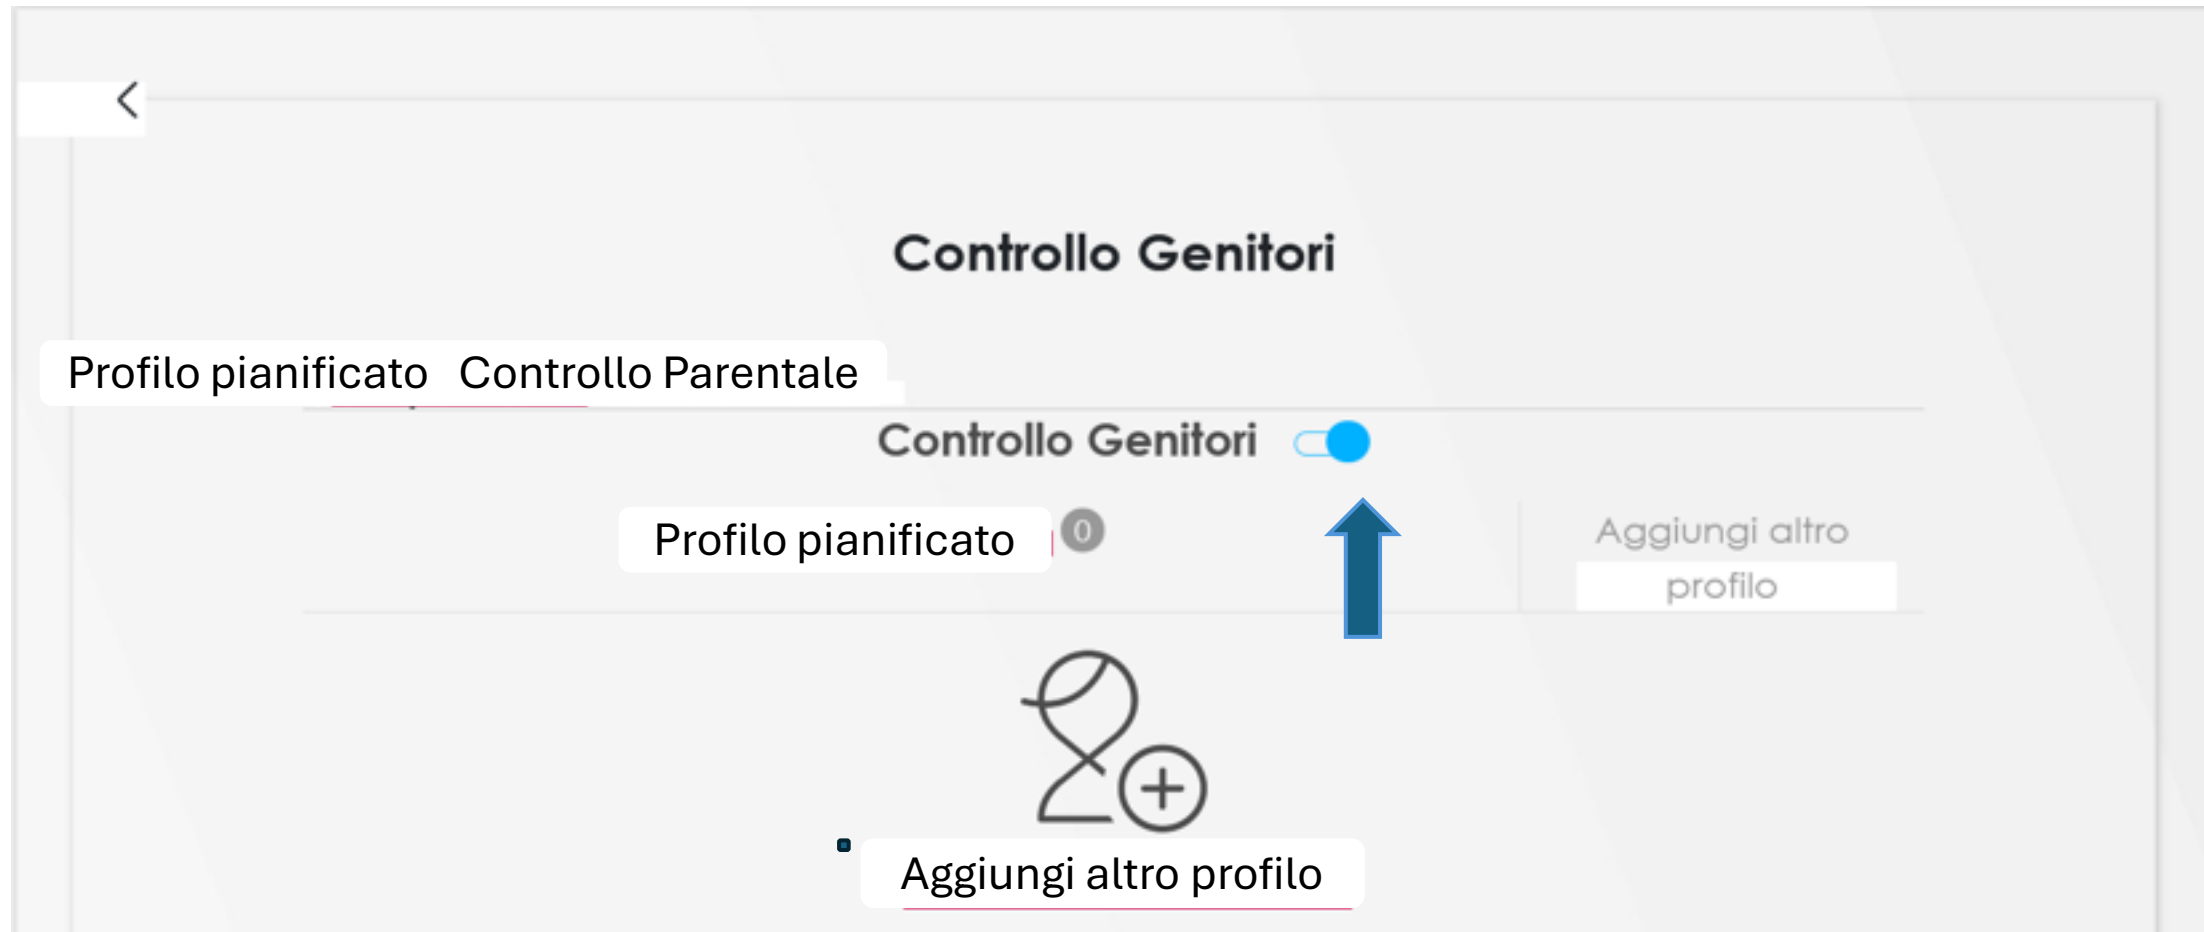

Cliccare su «**Applica**» per confermare la configurazione del Controllo Genitori

